

THE MEASURABLE DIFFERENCE

Fyrite® Insight® Plus

CO Field Calibration O₂ Sensor Replacement

Distributed By: The Safety Equipment Store® www.thesafetyequipmentstore.com Email: besafe@thesafetyequipmentstore.com Click Here* to visit The Safety Equipment Store®





Accessing the Sensor Fyrite®Insight® Plus





Accessing the sensors

- 1. Remove magnetic boot (if so equipped).
- 2. Remove sensor cover by pushing latch up and lifting cover off instrument.
- 3.The O2 (Oxygen) and CO (carbon Monoxide) sensor are exposed.





02

SENSOR



Components Fyrite®Insight® Plus





Components needed to Calibrate existing CO sensor





p/n 24-7059 Calibration Kit:

- -Regulator tubing assembly
- -Flow meter
- -Carrying case

p/n 24-0492 Calibration Gas:

- -Carbon Monoxide
- -Gas Mixture 500 ppm CO
- -Background Gas Air
- -Cylinder Capacity 103L
- -Accuracy +/-2 Percent



Sensor Calibration

Fyrite Insight Plus





CO Sensor Calibration

From the Calibration Menu, in the Insight Plus analyzer use the UP and DOWN arrow keys to highlight CO, and then press ENTER to display the CALIBRATE CO screen. Note that this requires password validation 1111

See next slide for calibration kit set up and instructions.

Calibration Menu

Calibration Menu Pressure T-Stack T-Air CO Menu

Calibration is performed by applying known values and accessing the password-protected menu items. When the Calibration Menu is selected, the user must enter a 4-digit numeric security code in order to proceed to the calibration options. The default password is 1111.

Function

Use the UP () and DOWN () arrow buttons to scroll through numerals 0-9 until the desired numeral is reached. Press ENTER to advance to the next position of the password. Press ENTER after all four digits are set. Press ESC to return to the SETUP





Channel Calibration Fyrite® Insight® Plus





CO Channel Calibration

- Enter into Calibration mode using Calibration password "1111"
- Select CO Calibration from menu
- Verify menu shows "Calibrate CO"
- Apply 500 ppm CO calibration gas using the excess flow method set to 1 LPM







CO Channel Calibration

- After 3 minutes press ENTER on the Insight to calibrate the CO channel
- "Good Calibration" must briefly display then return to the Calibration List Menu



11

Sensor Replacement

Fyrite Insight Plus





O₂ Sensor Replacement



2 Years



Oxygen Sensor 3 Years



BACHARACH. O₂ Sensor Replacement

Step	CO Sensor Replacement Procedure
1	Remove battery door and the connector tubing from the CO sensor.
2	Remove CO cap by twisting counter clockwise.
3	Gently pull CO sensor out of its socket.
4	Properly dispose of the old CO sensor.
5	Plug new CO sensor into its socket.
6	Install the CO cap by aligning it toward the "open" position (12 o'clock) as shown in the diagram below, then twisting the cap clockwise approximately 40° to the "closed" position (2 o'clock).
7	Reattach tubing.
8	Calibrate the CO sensor (using the calibration procedure on page 93, or using the B-SMART [®] procedure on page 85).



O₂ , LL O₂, and CO Sensor Replacement





O₂ Sensor Replacement

Function

When the O_2 life reaches the end of the graph segment, an error message is displayed (see below).



In this case:

- Note the 3-digit date code on the new sensor
- Replace the O₂ sensor
- Press F3 to change and verify sensor date code.

Resetting the Sensor Date Code

Use the LEFT (\blacktriangleleft) and RIGHT (\triangleright) arrow buttons to move the cursor horizontally to select between the 2-digit month code (00-12) and the one digit year code (0-9 corresponding to the last digit of the manufacture year) that make up the 3-digit date code.

Use UP (\blacktriangle) and DOWN (\bigtriangledown) arrow buttons to increment and decrement the selected field's value. When finished, press ENTER to save the changes.

Enter Code	Enter Code		
<u>06</u> 0	062		
Enter O₂ date code	Enter O₂ date code		
Menu	Menu		
NOTE: Entering a value of 000 (three zeros) disables this feature.			





O₂ Sensor Replacement Continued

Function

Next, verify the current month and year. Use the arrow keys to edit the current month and year (if needed) and press ENTER to confirm.

Set Clock	Set Clock
<mark>07</mark> /2012	07/20 <mark>12</mark>
Verify the month/year	Verify the month/year
Menu	Menu

NOTE: Use this feature as a reminder only. This status is based on:

- the date code on the sensor (that you enter)
- the current date (that you enter)
- the typical O₂ life span (2 years)
- the output of the sensor

If either of the entered values is incorrect, the status of your O₂ sensor life will not be accurate. Actual sensor life may vary.





B-SMART® Sensors

Fyrite Insight Plus





CO B-SMART® Sensor Replacement



CO B-SMART[®] Sensor





CO B-SMART® Sensor Replacement

Step	B-SMART [®] CO Sensor Replacement Procee		
1	Enter the CALIBRATION MENU. Note that this requires passwor Code 1111		
2	Use the UP (\blacktriangle) and DOWN (\triangledown) arrow buttons to select B-Sr ENTER to display the B-Smart code screen.		
3 Use the UP (▲) and DOWN (▼) arrow buttons to e alphanumeric code supplied with the pre-calibrated B-SM, the LEFT (◀) and RIGHT (►) arrow buttons to move the screen. Press ENTER.			
	Calibration MenuB-SmartT-AirEnter CodeCO0-00-00-00-00T-RefPress ENTERB-SmartMenuMenuMenu		
	NOTE: If the correct code was entered, the analyzer and returns to the CALIBRATION MENU. If an inco was entered, the screen will display "Invalid Code." make sure the correct code has been entered. I persists, contact your nearest Bacharach Service Provi		
	NOTE: B-SMART [®] codes can be entered through t User Software (FUS).		

edure

ord validation

Smart. Press

the 10-digit sensor. Use or across the



er accepts it correct code ." Check to If problem vider.





Thank you for your attention.

Click Here* for more information or to view this product on The Safety Equipment Store® website.



Bacharach Inc. 621 Hunt Valley Ci

621 Hunt Valley Circle New Kensington, PA 15068 **Direct:** 724-334-5000 **Fax**: 724-334-5001

mybacharach.com